



用户手册

USER MANUAL



安徽旭合新能源科技有限公司

安徽省滁州市中新苏滁产业开发区建业路1号

0550-3012191

www.solarnplus.com

旭日东升·合作共赢

1. INTRODUCTION FOR USER MANUAL 用户手册介绍	1
1.1 DISCLAIMER 免责声明	2
1.2 LIMITATION OF LIABILITY 责任范围	2
2. SAFETY PRECAUTIONS 安全措施	2
2.1 WARNING 警告	2
2.2 GENERAL SAFETY 通用安全	2
2.3 HANDLING SAFETY 操作安全	2
3. UNLOAD/TRANSPROTATION/STORAGE 卸货、运输和存储	3
3.1 MAKERS ON OUTER PACKAGING 包装标示说明	3
3.2 UNLOADING WARNNING 卸货注意事项	4
3.3 SECONDARY TRANSPORT AND WARNNING 二次运输及注意事项	5
3.4 STORAGE 存储	6
4. UNPACKING INTRODUCTION 拆包说明	7
4.1 UNPACKING SAFETY 拆包安全:	8
4.2 UNPACKING STEP 拆包步骤:	8
5. SITE SELECTION 场地选择	9
6. TILT ANGLE 倾角选择	10
7. INSTALLATION 安装	11
7.1 INSTALLATION SAFETY 安装安全	11
7.2 INSTALLATION METHOD 安装方法	12
7.2.1 MECHINICAL INSTALLATION AND WARRING 机械安装及注意事项	13
7.2.2 GROUNDING 接地	13
7.2.3 ELECTRICAL INSTALLATION 电气安装	19
8. INVERTER SELECTION AND COMPATIBILITY 逆变器的选择及其兼容性	22
9. MODULE MAINTENANCE FOR PV MODULE PV 组件的维护	24
9.1 PANEL VISION INSPECTION AND REPLACEMENT 组件外观检查和替换	24
9.2 CONNECTOR AND CABLE INSPECTION 连接器和线缆检查	24
9.3 CLEANNING 清洗	25
9.3.1 REQUIREMENTS FOR WATER QUALITY 水质要求	25
9.3.2 MODULE INSPECTION AFTER CLEANING 清洗后组件检查	27
9.3.3 TROUBLESHOOTING 故障排查	27
10. REPORTING TECHNICAL ISSUES or CLAIMS 技术问题或索赔	27

1. 用户手册介绍 INTRODUCTION FOR USER MANUAL

本手册适用于安徽旭合新能源科技有限公司(以下简称旭合科技)生产的边框系列太阳能组件的安装、维护和使用。如果不遵守这些安全指南,将可能导致人员伤亡或财产损失。

This Manual applies to the installation, maintenance and use of the framed series solar modules manufactured by Solar N Plus New Energy Technology Co., LTD . Failure to follow these safety instructions could result in personal injury or property damage.

安装和操作太阳能组件需要专业的技能,只有专业人员才可以从事该项工作。请在使用和操作组件之前仔细阅读安全和安装说明。安装商必须相应地把上述事项告知终端客户(或消费者)。

Installation and operation of solar modules require specialized skills, and only professional personnel can engage in the work. Please read the “Safety and Installation Instructions” carefully before using and operating the modules. The installer must inform the end customer (or consumer) of the above matters accordingly.

本手册中的“组件”或“PV 组件”指的是一个或多个边框系列太阳能组件。请保留此说明书以供将来参考。

The term “Module” or “PV Module” in this Manual refers to one or more framed series solar modules. Please keep this Manual for future reference.

1.1 免责声明 DISCLAIMER

旭合科技保留在没有预先通知的情况下变更本安装手册的权利。客户在安装组件过程中未按照本手册中所列出的要求操作,会导致提供给客户的产品有限质保失效。

Solar N Plus reserves the rights to change this User Manual without prior notice. Failure of the customer to follow the requirements outlined in this Manual during the installation of the module will result in the invalidity of product's limited warranty.

1.2 责任范围 LIMITATION OF LIABILITY

旭合科技不为任何形式的伤害负责,包括但不限于组件操作、系统安装失误以及未按照本手册的指示产生的身体伤害、受伤和财产损失负责。

Solar N Plus is not responsible for any form of damage, including but not limited to module operation and system installation error, and personnel injury, hurt, and property loss resulted from failure to follow the instructions in this Manual.

2. 安全措施 SAFETY PRECAUTIONS

2.1 警告 WARNING

对组件进行安装、接线、操作或维护前,应阅读并理解所有安全细则。当组件电池面直接暴露在阳光或其他光源下时,会产生直流电(DC), 无论是否连接组件,直接接触组件的带电部分,例如接线端子等,将可能导致人员伤亡。

Before installing, wiring, operating, or maintaining SolarPlus modules, you should read and understand all safety

precautions. Direct current (DC) is generated when the battery surface of the module is exposed to direct sunlight or other light sources, and direct contact with the live parts of the module, such as terminals, may result in death of personnel whether connected to the module or not .

2.2 通用安全 GENERAL SAFETY

· 所有的安装工作必须完全遵守当地法规和相应的国际电气标准。

All installation work must comply with the local codes and the relevant international electrical standards.

· 建议由具备光伏系统安装经验的人员进行安装。如果由不熟悉相应安全程序的人员操作将会非常危险。

Solar N Plus recommends that PV module installation is conducted by personnel with experience in PV system installation. Operation by personnel who are not familiar with the relevant safety procedures will be very dangerous.

· 不允许未经授权的人员接近安装区域或者组件仓储区域。

Do NOT allow unauthorized persons to access the installation area or module storage area.

· 请不要安装玻璃已损坏或背板损坏的组件。

Do NOT install modules with damaged glass or damaged backsheet.

· 不要拆解或移动组件中的任何部分。

Do NOT disassemble or move any part of the module.

· 不要人为在组件上聚光。

Do NOT artificially focus light on the module.

· 当组件有电流或外部电流出现时,不得连接或断开组件。

Do NOT connect or disconnect the module when it is energized or connected with an external power supply.

2.3 操作安全 HANDLING SAFETY

· 禁止直接在包装或组件上站立、踩踏、行走或跳跃。

Do NOT stand, walk on or lean on the module directly.

· 请不要损坏或敲打组件的玻璃和背板面。

Do NOT damage or scratch the front or backside surfaces of the module.

· 请不要拉扯、划伤或用力弯折输出线缆,否则线缆的绝缘部分会被损坏导致电流泄露或触电。

Do NOT scratch the output cable or bend it with force. The insulation of output cable can break and may result in electricity leakage or shock.

· 请不要在电源未断开的情况下,使用水来灭火。

Do NOT use water to extinguish fires of an electrical origin.

· 请不要在潮湿或者大风期间安装或处理组件。在安装现场,请保持组件电器元件的清洁与干燥。如果线缆插头在潮湿条件下互相接触,会被腐蚀。任何被腐蚀的组件都不能被使用。

Do NOT install or handle modules when they are wet or during periods of high wind. At the installation site, take

cables are left in damp conditions then the contacts may corrode. Any module with corroded contacts should not be used.

- 请不要松动或拧下光伏组件的螺丝, 有可能导致组件载荷下降, 甚至掉落

Please do NOT loosen or unscrew the PV module bolts. This may lead to a reduction of the module's load rating and potential damage from a fall.

- 请不要让物体直击组件或物体直接掉落在组件上。

Do NOT drop PV modules or allow objects to fall down on the PV modules.

- 在阳光下, 请不要在没有任何保护的情况下用手直接触摸组件的接线盒、连接器、线缆等带电体, 无论光伏组件是否与系统连接。

Do NOT touch the terminal box or the ends of the output cables (connectors) with bare hands under sunlight, regardless of whether the PV module is connected to or disconnected from the system.



3.卸货、运输和存储 UNLOAD/TRANSPORTATION/STORAGE

- 预防措施和通用安全细则:

Precautions and general safety rules:

- 组件在安装前应存储在原包装箱内, 请保护好包装不要使其受损。按照建议的拆包步骤打开组件包装。打开、运输和存储过程需小心操作。

The modules should be stored in the SolarPlus original package before installation. Protect the package from damage. Unpack the modules as per the recommended unpacking procedures. The whole process of unpacking, transport and storing should be handled with care.

- 禁止在未拆包的包装箱上及组件上站立、攀爬、行走或跳跃。

Do NOT stand, climb, walk or jump on unpacked pallets of modules.

- 安装前, 确保所有组件和电气接触都是干净和干燥的。

Before installation, ensure that all modules and electrical contacts are clean and dry.

- 如果需要暂时存放组件, 则应将组件存储在干燥通风的环境中。

If the modules are required to be stored temporarily, they should be stored under dry and ventilated conditions.

- 拆包时, 必须由2个或2个以上人员同时操作, 禁止拉扯组件的导线或接线盒来搬运组件, 搬运组件时应由2个人以上带防滑手套同时手持组件搬运; 禁止头顶组件搬运; 禁止堆叠组件。

Unpacking must be carried out by two or more persons at the same time. It is forbidden to use the wires or junction boxes of the modules to carry the modules. Handling the modules requires two or more people with non-slip gloves; Do NOT handle the modules over-head or stack the modules.

- 禁止将组件置于无可靠支撑或未固定的环境下。


Do NOT put the modules in a place that is not supported or stable.

- 禁止组件与尖锐物接触, 划痕, 以免直接影响组件的安全性。

Do NOT allow the modules to come in contact with sharp-pointed objectives to prevent them from scratches, avoiding a direct impact on the safety of modules.


3.1包装标示说明 MAKERS ON OUTER PACKAGING

3.1.1
禁止组件随意丢弃, 需要专门回收。
Do NOT discard the modules at will; special recycling is required.




EU-28 WEEE COMPLIANT


3.1.2
禁止组件淋雨或者受潮。
Modules must be kept dry, not expose to rain or moisture.




3.1.3
纸箱中的组件为易碎物品, 搬运时应小心轻放。
Modules in carton are fragile, which must be handled with care.




3.1.4
包装在运输时应竖直向上。
The packaging must be transported upright.




3.1.5
禁止在包装箱和组件上面踩踏。
Do NOT step on the package and module.




3.1.6
纸箱可循环再利用。
The carton can be recycled.



3.1.7
堆叠组件时请勿超过外包装箱上印刷标志的最高层数限制。(n=2时,最多堆码2层;n=3时,最多堆码3层)
Modules shall be stacked as required, not exceeding the maximum number of layers printed on the outer packaging. (n = 2 means no more than two layers and n = 3 means no more than three layers)



3.1.8
一块组件需由2个人同时搬运。
One module shall be handled by at least two persons together.

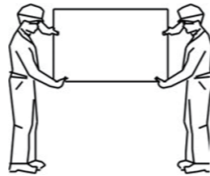

3.2.5
Cover the module with waterproof material to prevent it from moisture.
使用遮雨布盖住组件,防止组件受潮。




3.2卸货注意事项 UNLOADING WARNING


3.2.1
使用合理的吊装治具,吊装一次性最多允许2托组件。吊装前应确认托盘和纸箱是否有破损及吊装的绳索是否结实、牢固。吊装快着地时,两人一人一边扶正纸箱轻轻放在项目地相对平坦的位置上。
Use the correct (as picture) lifting fixture to handle, no more than 2 pallets per lift. Before lifting, please confirm the tray and the carton are NOT damaged and the hoisting rope is firm and solid. Before lowering the carton back on the ground, two persons must support the two sides of the carton gently to put it on a relatively flat place.




3.2.2
请使用叉车将组件从货车上卸下来。
If the condition permits, use a fork lift to remove the module pallets from the truck.
将组件放置于水平地面上。
Put the modules on level ground.

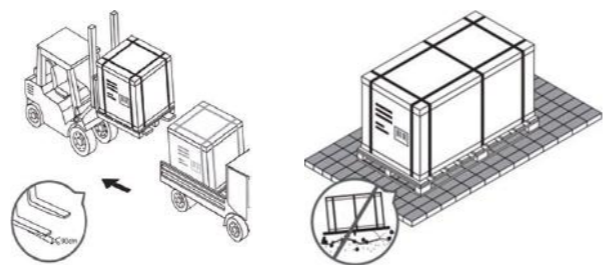

3.2.3
将组件放置在通风干燥处。
Store the module in a dry and ventilated place.

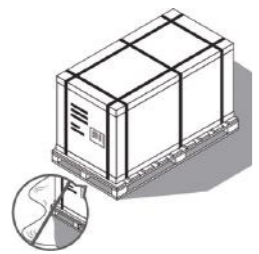

3.2.4
禁止在项目地将组件堆码。
Do Not stack the modules at the project site.

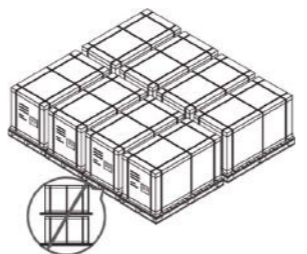

3.3二次运输及注意事项 SECONDARY TRANSPORT AND WARNING


3.3.1
如果组件需要长途运输或长期存储,请不要拆除原包装。
Do NOT remove the original packaging if the modules require long-distance transport or long-term storage.



3.3.2
包装的成品可以通过陆运、海运、或空运进行运输。在运输过程中:请将包装箱固定在运输平台上,确保包装不会翻滚。(以陆运为例)
The finished package can be transported by land, sea or air. During transport, make sure that the package is fixed securely to the shipping platform without movement.



3.3.3
运输:正常卡车运输时,最多2层叠加后运输。
Transport: Do Not stack more than two layers on a truck.




3.3.4
项目现场托运,只允许1层运输。
Only one layer stacking is only allowed for transport at the project site.




3.3.5
禁止三轮车转运。
No transport or handling by pedi-cab as shown below.



3.3.6
禁止用绳子背组件。
Do Not transport the module with rope as shown below.



3.3.7
Do Not carry the modules on the back of one person as shown below.
禁止单人背组件。



3.4 存储 STORAGE

禁止淋雨或者受潮, 请将包装的成品置于通风、防雨和干燥的地方。

Do NOT expose the modules to rain or moisture. Store the finished product in a well ventilated, waterproof and dry place.


如果组件需要长途运输或长期存储, 请不要拆除它。

Do NOT remove the original packaging if the module requires long-distance transport or long-term storage.

3.4.1

项目地仓库存储(湿度<85%; 温度:-20°C ~+50°C): 60 片边框组件与 72 片边框组件静态堆码堆放 2 托。


Storage in project site warehouse (moisture<85%, temperature range from -20°C to + 50 °C): 60-cell frame module and 72-cell frame module to be stacked separately in two groups.

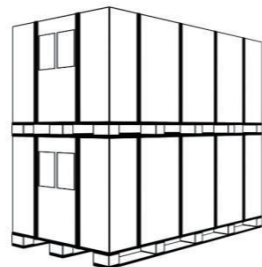


3.4.2

正常仓库的存储(湿度<85%; 温度:-20°C ~+50°C): 60 片边框组件最多堆码 3 层; 72 片边框组件最多堆码 2 层。(以 72 片边框组件为例)

Normal warehouse storage (moisture<85% and temperature range from -20°C to + 50 °C): 60-cell frame module to be stacked no more than three layers and 72-cell frame module to be stacked no more than two layers .(take 72-cell frame module for example)

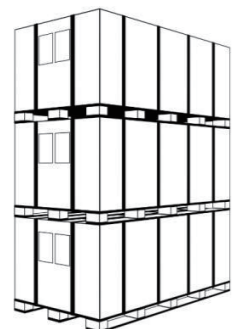

60 cell

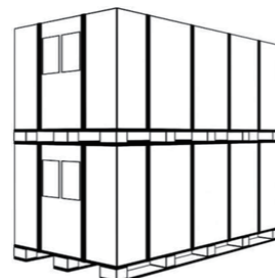

72 cell

4. 拆包说明 UNPACKING INTRODUCTION

4.1 拆包安全 UNPACKING SAFETY

· 在户外拆箱时, 禁止在下雨的条件下作业。因为纸箱淋雨后会变软散开, 里面的光伏组件(下文简称“组件”)会脱出造成损坏或者砸伤人员。

For unpacking outdoors, it is prohibited to operate in rainy conditions. Because the carton will become soft and damaged after it gets wet in the rain. The stacked PV modules (hereinafter referred to as "modules") may tip over, which may cause damage or injury to personnel.

· 如果现场有风, 需要特别注意安全, 尤其是大风的情况下, 建议不要搬运组件, 并且妥善固定好已拆开包装的组件。

For a windy site, it is necessary to pay special attention to safety. Especially, it is NOT recommended to transport the modules in high wind conditions. The unpacked modules must be tied down to avoid any unwanted movement.

· 作业地面需要保证包装箱能够水平稳定的放置, 避免倾倒。

The work surface is required to be level to ensure that the package can be placed stably, avoiding sliding.

· 拆箱过程中请佩戴保护手套, 避免伤手和在玻璃面留下指印。

Wear protective gloves during unpacking to avoid hand injury and fingerprints on the glass surface.

· 外包装可查询组件信息和拆包作业指导, 请在拆包前仔细阅读拆包说明。

Module information and unpacking instructions can be found on the outside of each package. Please read the instructions before unpacking.


· 每块组件需要2个人抬, 抬组件时, 禁止拉扯接线盒; 禁止抓住长边取出组件。

Each module shall be handled by two persons. It is forbidden to use the wires or junction boxes of the modules to carry the module. Do NOT take the module out of the carton by pulling on the long side frame.

4.2 拆包步骤 UNPACKING STEP

4.2.1 拆包前, 请核对外箱 A4 纸上的产品名、序列号及相关建议, 并仔细阅读拆包指导书, 禁止自定义式的拆包方式。

Before unpacking, please check the product name, serial number and related suggestions on the A4 paper. Please read the unpacking instructions carefully. NO other customized unpacking method is allowed.

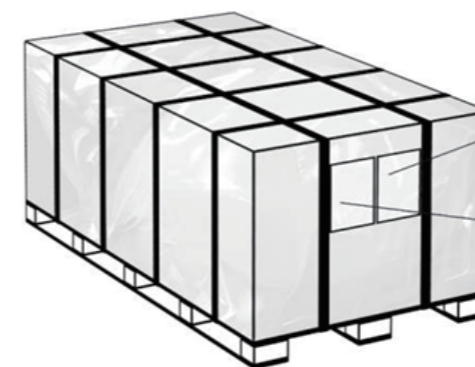


拆包指导书 Unpacking instructions

A4 纸。(产品名、序列号、相关建议等)

A4 paper.(product name, serial number, related suggestions, etc.)

4.2.2 用刀片或剪刀剪断托盘短边的两根打包带,并沿垂直方向将侧面纸箱裁开。

Cut the two packing belts at shorter sides of the tray with blade or scissors, and unpack the side surface of the carton along the vertical direction.

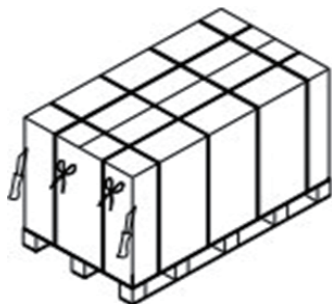

4.2.4 剪断纸箱内部的上下两条横向打包带,从托盘底部剪断靠近托盘的两条打包带,取出打包带。


Cut the two horizontal packing belts in the carton and cut the two packing belts near the bottom of the tray, and remove the packing belts.

4.2.5 若在水平地面拆包,从包装一侧朝另一侧依次取出组件,然后两人搬运。

When unpacking on a level surface, take out the module from one side of package to the other, and then carry it with two persons.



若在非水平地面拆包,需要做好防倾斜措施。

When unpacking on a sloping surface, please protect the modules from tipping over or sliding.

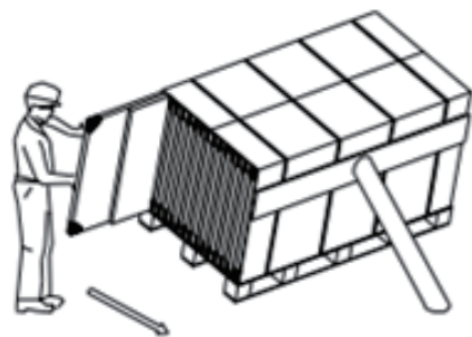

4.2.3 剪开短边胶带,抓住被裁纸板的底边抬起90°,并抽出该纸板,露出组件。

Cut the tape at shorter edge and hold it up by 90° from the bottom; and pull out the cardboard to expose the modules.

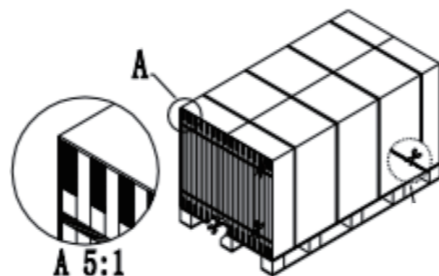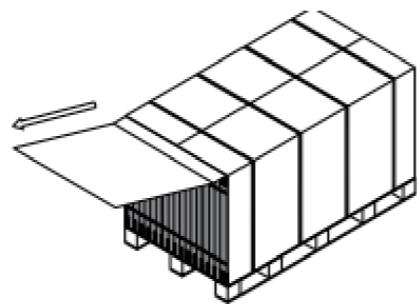

4.2.6 禁止将组件斜靠在安装柱子上。

Do NOT lean the module on the mounting posts.




4.2.7 如果拆包后没有将所有组件取出,有组件剩余在包装中的情况,则将剩余组件平放后重新打包,防止倾倒,需水平放置。

If all the modules are NOT removed after unpacking and some of them are left in the package, the remaining modules shall be laid flat and repackaged to prevent from falling down. Must be placed by horizontal.

组件叠放的数量:

60片边框组件不超过20片,72片边框组件不超过16片。

The stacked number of modules: 60-cell frame modules to be stacked NOT more than 20 pieces, 72-cell frame modules NOT more than 16 pieces.

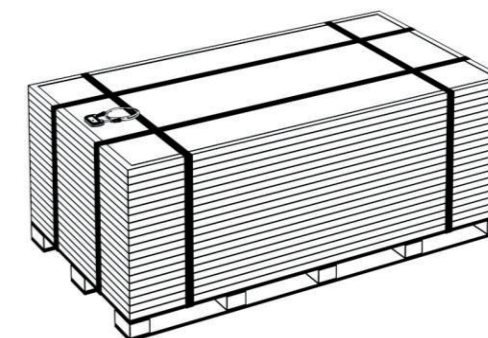

5.场地选择 SITE SELECTION

建议通过优化的倾斜角安装太阳能组件以达到能量输出最大化。一般来说它大致等同于项目所在地的纬度,面向赤道方向。但在实际的设计中还是按照当地具体情况设计并找出最佳倾斜角。

Solar modules are recommended to be installed at an optimized tilt angle to maximize the energy output. It is roughly equal to the latitude of the project site as a rule of thumb, facing toward the equator. Optimized system designs incorporate other local requirements.

当在屋顶上安装太阳能组件时,屋顶上必须要覆盖有一层适用于该等级的防火材料,并且保证背板和安装面之间充分的通风,要在屋顶边缘和太阳能阵列的外边缘之间留出安全的工作区域。

When installing solar modules on a roof, the roof must be covered with a layer of fireproof material applicable to this class, and adequate ventilation must be ensured between the back sheet and the installation surface. A safe working area also must be left between the edge of the roof and the external edge of the solar array.

如果住宅设施在地面上,组件的安装应按照当地法规进行,例如安装中需要用到围栏。

In the case of residential installations on the ground, modules shall be installed following local regulations, e.g. using fence.

对组件进行定位以尽量减少其在一天中任何时间段遮光的可能性。

Position the modules to minimize the chances of shading at any time of the day.

旭合科技推荐组件安装在工作环境温度 -20°C ~ 50°C 的环境,组件的极限工作温度为 -40°C ~ 85°C 。海拔高度低于2000m,最大机械载荷正面5400,背面2400。

Solar N Plus recommends that the module should be installed at a working ambient temperature of -20°C ~ 50°C . The module's limit working ambient temperature range is from -40°C to 85°C . Maximum altitude less than or equal to 2000m. The maximum mechanical load is 5400 on the front and 2400 on the back.

尽量将组件安装在一年中少有遮阳的位置。

Try to install modules in a location where there is rare shading throughout the year.

如果您计划在可能出现水渍侵害的地方(湿度: $>85\text{RH}\%$)使用光伏组件,请先向旭合科技当地的技术支持团队咨询以确定

合适的安装方法,或确定是否可以安装。

If you are planning to use the PV modules where the water damage (Humidity: > 85RH%) may be possible, please consult with Solar N Plus local technical support first to determine an appropriate installation method, or to determine whether the installation is possible.

如果组件安装在有频繁雷电活动的地方,必须对组件进行防雷击保护,防雷请参考旭合科技申明文件,获取该文件请联系当地技术支持或登录<http://www.solarnplus.com/>与我们联系。

If the module is installed in an area with frequent lightning and thunder, the module must be protected against lightning strikes. Refer to Solar N Plus' s declaration document for lightning protection. Please contact with local technical support or contact us from <http://www.solarnplus.com/>.

请勿安装在可燃气体附近。

Make sure flammable gases are NOT generated near the installation site.

按照IEC61701要求开展的光伏(PV)组件盐雾腐蚀试验结果表明,旭合科技的太阳能组件可以安装在近海或亚硫酸盐区域附近的腐蚀性盐碱地区。组件不得浸泡在水中或长期沾水(纯水或盐水)的环境中(例如喷泉、浪花等)。如果组件置于盐雾(即海洋性环境)或者含硫(即含硫源、火山等)的环境中,会有腐蚀的风险。

According to Intertek-conducted IEC 61701, salt mist corrosion testing of photovoltaic (PV), Solar N Plus modules can be installed in corrosive salt areas within proximity of the ocean or sulfurous areas. The module must not be soaked in the water or in the environment (i.e., fountain, spindrift, etc.) where the module would touch water (pure water or brine) for a long term. If the modules are placed in an environment of salt fog (i.e., marine environment) or sulfur (i.e., sulfur sources, volcanoes, etc.), there is a risk of corrosion.

在离海边50m~500mm的地方,必须采用不锈钢或者铝材料来与光伏组件接触,并且对安装部位做好防锈蚀的处理。获取该文件请联系当地技术支持或登录<http://www.solarnplus.com/>与我们联系。

In locations that are 50m ~ 500mm from the ocean, stainless steel or aluminum materials must be used to contact the PV modules, and the installation position must be processed with anti-corrosion treatment. Please contact with local technical support or contact us from <http://www.solarnplus.com/>.

IEC62716:2013“光伏(PV)组件的氨腐蚀试验”和DLGFokus耐氨性试验的结果表明,旭合科技太阳能组件可以安全地安装在像农舍这样的氨气较重的环境中。

According to IEC62716:2013 “Ammonia corrosion testing of photovoltaic (PV) modules” and DLG Fokus testing for ammonia resistance, Solar N Plus modules can be safely installed in ammonia-heavy environments, such as farm houses.

6.倾角选择 TILT ANGLE

光伏组件的倾角测量指组件与水平地面的角度。针对不同的项目有不同的安装倾角,旭合科技推荐的组件安装夹角不小于10°,或依据当地法规指南或有经验的光伏组件安装商的建议。

The tilt angle measurement of the PV module refers to measuring the angle between the module and the horizontal ground surface. For different projects there are different mounting angles. Solar N Plus recommends that the mount-

ing tilt angle should be NOT less than 10°, or in accordance with local regulations or follow the recommendations of experienced PV module installers.

通过测量PV组件和水平地面之间的夹角来得出PV组件的倾斜角测量值。

The tilt angle of the PV module is measured between the PV module and a horizontal ground surface.

在北半球安装,组件最好朝南,在南半球安装,组件最好朝北。

In the Northern Hemisphere, the PV modules should typically face south, and in the Southern Hemisphere, the PV modules should typically face north.

应在组件边框和墙面或屋顶表面之间留有至少115mm(4.5英寸)(建议)的间隙。如果采用其他安装方式,则有可能影响UL认证或防火等级。

A clearance of at least 115mm (4.5in) (recommended) is provided between modules frame and the surface of the wall or roof. If other mounting means are employed this may affect the UL Listing or the fire class ratings.

7.安装 INSTALLATION


旭合科技边框系列组件按照以下条件安装可以使用25年以上。除了所需的IEC认证外,旭合科技产品还经过测试以验证其对牛棚附近可能存在的氨气的抵抗性,以及其是否适合安装在潮湿(沿海)区域和沙尘暴频发区域。

Solar N Plus Framed series modules may be installed in the following conditions to produce energy for more than 25 years. In addition to the required IEC certifications, Solar N Plus products have also been tested to verify resistance to ammonia fumes that may be present around barns sheltering cattle, as well as suitability for installation in humid (coastal) areas and areas of high sand storms.

7.1安装安全 INSTALLATION SAFETY

旭合科技的太阳能组件可以横向或竖向安装(支架距长边距离为150~250mm之间),采用横向安装的方式可以使灰尘对太阳能电池板的遮光影响最小化。请注意72片或144片边框组件只能采用长边安装方式,选择横装时组件可以共用垂直方向的支架,但不能共用同一根水平方向安装的支架,且不能采用短边安装方式。60片或120片边框组件既可以采用长边安装,可以采用短边安装;但是当客户选择横向模式时,60-cell/120-cell的组件不能共用同一根水平方向安装的支架。具体请见下图。

Solar N Plus Modules can be mounted in landscape or portrait orientation (the distance between the racking and the long side is 150-250mm), and however the impact of dirt shading the solar cells can be minimized by orienting the product in landscape. Please pay attention that 72-cell/144-cell framed modules can only be installed in the long side frame on vertical racking not horizontal racking when customers choose landscape mode, and they cannot be installed in the short frame side. 60-cell/120-cell framed modules can be installed in both long side frame and short side frame, but 60-cell/120-cell framed modules cannot be installed in the long frame shared with the same horizontal racking when customers choose landscape mode. Details as shown picture below.

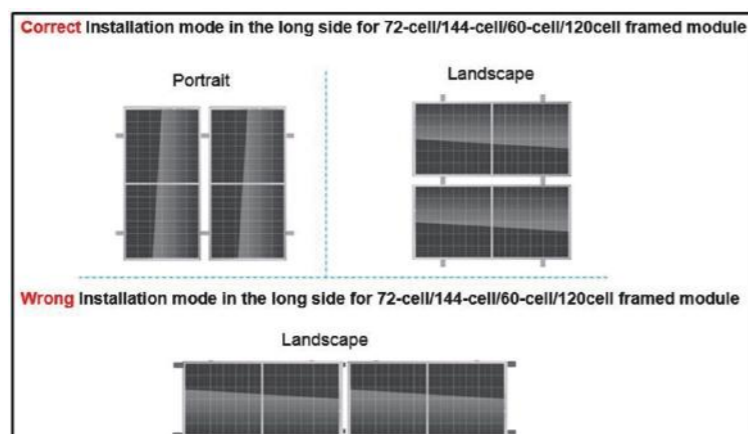

- 请使用干燥的绝缘防护措施:如绝缘工具、安全帽、绝缘手套、安全带和安全鞋(橡胶底)。

Always wear dry insulation protection equipment: insulated tools, head gear, insulated gloves, safety belt and safety shoes (with rubber soles).

- 安装时请不要佩戴金属饰物,以免戳穿组件,引起触电危险。

Do NOT wear metallic jewelry which can cause electric shock during installation.

- 请勿在下雨、下雪或大风的情况下安装组件。

Do NOT install modules under rain, snow or windy conditions.

- 安装时请保持连接器干燥清洁,以免触电风险,建议开箱后立即安装。

Please keep the connector dry and clean during installation to avoid the risk of electric shock. It is recommended to install it immediately after unpacking.

- 如果PV组件的端子潮湿则不能进行任何工作,以免触电。请在开箱后立即安装。

Due to the risk of electrical shock, do NOT perform any work if the terminals of PV module are wet. Please install immediately after you unpacking.

- 旭合科技组件的应用等级为A类,可用于>直流50V或240W以上的系统。

The application level of Solar N Plus module is Class A, which can be used in systems operating at greater than 50 V DC or 240 W, where general public contact access is anticipated.

- 在安装之前,将PV组件保留在纸箱中。

Keep the PV module packed in the SolarPlus carton until installation.

- 在PV组件安装和布线期间,请使用绝缘材料将PV组件表面完全覆盖住。

Please use an opaque material to completely cover the PV module surface during PV module installation and wiring.

- 如果系统电路与负载接通,请不要拔下连接插头。

Do NOT unplug the connector if the system circuit is connected to a load.

- 工作时不要站在玻璃上,以免玻璃破碎造成伤害或引发触电危险。

Do NOT stand on the module glass while installing. There is a risk of injury or electric shock if glass is broken.

- 不要单独工作(一直保持由2个或更多的人组成团队工作)。

Do NOT work alone (always work as a team of 2 or more people).

- 在通过螺栓将PV组件紧固到支架上时,不要损坏PV组件的背板。

Do NOT damage the back sheet of PV modules when fastening the PV modules to a support with bolts.

- 更换PV组件时,不要损坏周围的PV组件或安装结构。

Do NOT damage the surrounding PV modules or mounting structure when replacing a PV module.

- 电缆应固定起来或绑好,这样在安装后不会暴露在阳光直射下,可以防止电缆老化。从接线盒下引出电缆可能会引起各种问题,例如积水处漏电和火灾。

Cables shall be located and secured so that they will not be exposed to direct sunlight after installation to prevent degradation of cables. Low drooping of cables from the terminal box must be avoided. Low hanging cables could cause various problems such as animal biting, electricity leakage in water, and fire.

- 不同色系组件避免安装在同一阵列或屋顶中。

Modules with different color codes are not recommended to be installed in one block or the same rooftop.

7.2 安装方法 INSTALLATION METHOD

7.2.1 机械安装及注意事项 MECHANICAL INSTALLATION AND WARNING

组件和支架系统的连接可以使用边框上的安装孔、夹具或者嵌入式系统来安装。安装组件必须依照下面示例和建议进行,如果安装方式与旭合科技公示不同,请咨询旭合科技当地技术支持或售后,并取得旭合科技同意,否则会损坏组件并导致质保失效。

The connection of the module to the racking system can be created through the mounting holes, with clamps, or an embedded system on the frame. The modules must be installed according to the following examples and recommendations. If a different installation method is desired, please contact Solar N Plus customer service or technical support team for consultation. Improperly mounted modules maybe damaged. If alternative mounting method is used and not approved by Solar N Plus, the modules will not continue to have a valid warranty.

两个组件之间的最小间距为 10mm (0.4 英寸)。

The minimum distance between two modules is 10mm (0.4in).

挡板不能承受超过最大许可载荷的暴风雪冲击,也不能承受因支撑结构的热膨胀而引起的过大的力。

Panels must not be subjected to wind or snow loads exceeding the maximum permissible loads, and must not be subjected to excessive forces due to the thermal expansion of the support structures.

安装或使用过程中,排水孔在任何情况下都不能堵塞。

The module frame drain holes cannot be blocked in any situation during installation or use.

*注意 Notes

根据 IEC61215, TUV 已经对组件进行了设计载荷评估,安全系数 1.5 倍;机械承载取决于所用的安装方法,未能遵循本手册说明可能会导致承受雪和风荷载的变化。系统安装人员必须确保所使用的安装方法符合这些要求和任何当地的法律法规。

The design loading of modules have been evaluated by TUV according to IEC61215 with 1.5 times safety factor;The mechanical load bearing is dependent upon the mounting methods used and failure to follow the instructions of this manual may result in different capabilities to withstand snow and wind loads;The system installer must ensure that the installation methods used meet these requirements and any local codes and regulations.

所描述的组件被安装在模块下方延伸的连续的支架上。如果组件被安装在没有连续的支架的情况下,其最大允许载荷将会降低,需由旭合科技重新进行评审。

The modules depicted are mounted on continuous rails that extend beneath the modules. If modules are mounted without continuous rails below them, the maximum allowable loading will be reduced and is subject to review by Solar N Plus.

A. 螺丝安装(4-φ9*14mm 安装孔) Mounting with Bolts(4-φ9*14mm mounting holes)

通过组件背面边框上的安装孔,使用螺栓把组件固定在支架上,安装细节下图所示。

Modules can be attached using the mounting holes on the back of the module frame, by fixing the module to the support rails with bolts. The mounting details are shown in the following figures.

每个组件的边框上都有 4-φ9*14mm 的安装孔,通过这些安装孔可以很好地将组件固定到支撑结构上以优化其负载承受能力,4-φ9*14mm 的安装孔用于常规安装,如图 1 所示:

The frame of each module has 4-φ9*14mm mounting holes, ideally placed to optimize the load handling capability, to secure the modules to the supporting structure. Installation holes of 4-9*14 mm are used for routine installation, as shown in Figure 1:

为了最大限度地延长安装寿命,旭合科技强烈建议使用抗腐蚀(不锈钢)固定件。

To maximize mounting longevity, Solar N Plus strongly recommends the use of corrosion proof (stainless steel) attachment hardware.

使用 M8 螺栓、平垫圈、弹簧垫圈和螺母在每个固定位置固定组件,并拧紧至 16~20 N.m (140- 180lbf.in) 的扭矩。

Secure the module in each mounting location with an M8 bolt and a flat washer, spring washer and nut and tighten to a torque of 16~20 N.m(140-180lbf.in).

组件连接的所有部位应采用最小厚度为 1.8mm 且外径为 20-24mm (0.79-0.94 英寸) 的扁平不锈钢垫圈。

All parts in contact with the modules should use flat stainless steel washers of minimum 1.8mm thickness with an outer diameter of 20-24mm (0.79-0.94in).

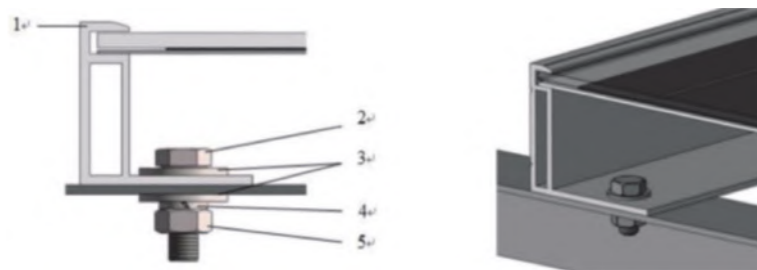


图 1 单玻组件系列安装图示
Fig.1 Backsheet-Glass module
1)铝边框 Aluminum Frame
2)M8不锈钢螺栓 M8 Stainless Bolt
3)不锈钢平垫圈 Flat Stainless Washer
4)弹簧不锈钢垫圈Spring Stainless Washer
5)六角不锈钢螺母 HEX Stainless Nut

组件 Module	载荷 Mechanical Load Pressure	安全系数 Safety factor	安装图 Mounting Direction
66/132片单玻 66/132 pcs Backsheet-Glass	+3600 Pa /-1600Pa	1.5	
72/144片单玻 72/144 pcs Backsheet-Glass	+3600 Pa /-1600Pa	1.5	

B. 单轴跟踪系统安装(4- φ7*10mm 安装孔)。

Mounting with Single-axis Tracking System(4-φ7*10mm mounting holes) .

通过组件背面边框上的安装孔,使用螺栓把组件固定在支架上,安装细节下图所示。

Modules can be attached using the mounting holes on the back of the module frame, by fixing the module to the support rails with bolts. The mounting details are shown in the following figures.

每个组件的边框上都有 4-φ7*10mm 的安装孔,通过这些安装孔可以很好地将组件固定到支撑结构上以优化其负载承受能力,4 个 φ7*10mm 的安装孔用于单轴跟踪系统安装,如图 2 所示。

The frame of each module has 4-φ7*10mm mounting holes, ideally placed to optimize the load handling capability, to secure the modules to supporting structure. 4 installation holes of 7*10 mm are used for Single-axis tracking system installation, as shown in Figure 2.

为了最大限度地延长安装寿命,旭合科技强烈建议使用抗腐蚀(不锈钢)固定件。

To maximize mounting longevity,Solar N Plus strongly recommends the use of corrosion proof (stainless steel) attachment hardware.

使用 M6 螺栓、平垫圈、弹簧垫圈和螺母在每个固定位置固定组件,并拧紧至 16~20 N.m (140- 180lbf.in) 的扭矩。

Secure the module in each mounting location with an M6 bolt and a flat washer, spring washer and nut and tighten to a torque of 16~20 N.m(140-180lbf.in.).

与单轴跟踪系统连接的组件的所有部位应采用最小厚度为 1.5mm 且外径为 16-20mm (0.63-0.79 英寸) 的扁平不锈钢垫圈。

Flat stainless steel gaskets with a minimum thickness of 1.5mm and an external diameter of 16-20mm (0.63-0.79 inches) shall be used in all parts of the components connected to the Single-axis tracking system.

这种安装方式下的机械载荷: 根据 UL1703, 正面最大载荷为 30 lbs.ft2 & 背面最大载荷为 30 lbs.ft2。

Mechanical Load Pressure under this method: 30 lbs.ft2 max from the front side & 30 lbs.ft2 max from the rear according to UL1703.

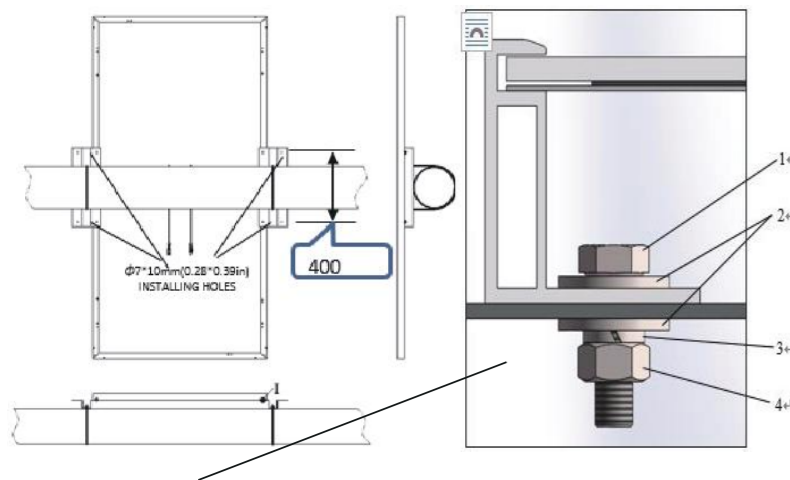
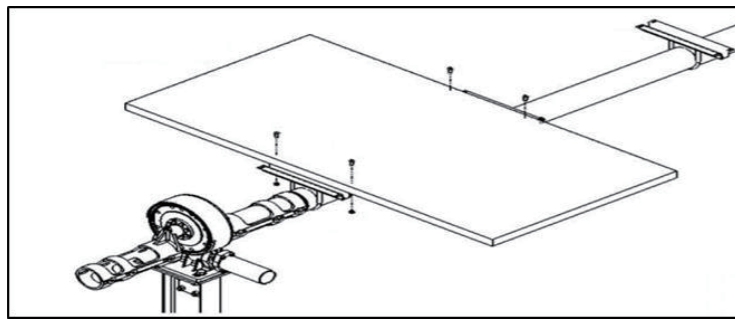


图 2 单玻组件单轴跟踪系统安装图示

Fig 2. Backsheet-Glass module with Single-axis Tracing System

- 1) 六角螺栓 M6 hex bolt M6
- 2) 平垫片 flat stainless washer
- 3) 弹垫片 spring stainless washer
- 4) 六角螺母 hex stainless nut

组件 Module	载荷 Mechanical Load Pressure	安全系数 Safety factor	安装图 Mounting Direction
72/144片单玻 72/144 pcs Backsheet-Glass	+1600 Pa / -1600 Pa	1.5	

C. 2V 安装方式 2V Installation Method

单块组件使用两个 $\phi 7*10\text{mm}$ 安装孔和两个 $\phi 9*14\text{mm}$ 安装孔安装, 如图 3 所示, 整体安装方式如下表格所示。

The single module is installed with two $\phi 7*10\text{mm}$ mounting holes and two $\phi 9*14\text{mm}$ mounting holes, as shown in figure 3. The overall installation method is shown in the table below.

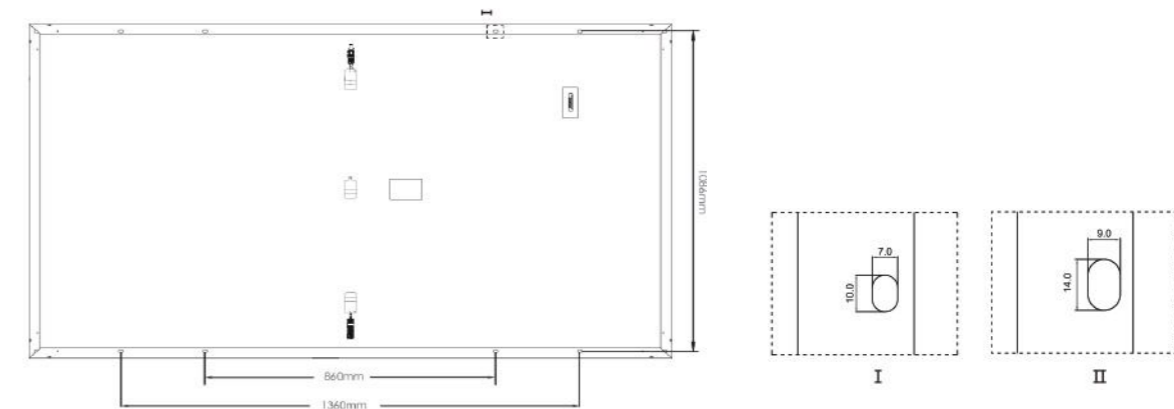


图 3: 2V 安装方式的单块组件使用安装孔示意图

Figure 3: Mounting holes schematic of the single module for the 2V installation method

Module 组件	Mechanical Load Pressure 载荷	Safety factor 安全系数	Mounting Direction 安装图
72/144 pcs Backsheet-Glass 72/144片单玻	+1600 Pa / -1600 Pa	1.5	

D. 夹具安装 Mounting with Clamps

旭合科技在用多家制造商的不同夹具测试过其组件后,至少可以固定M8螺栓的夹具. 夹钳长度≥40mm (1.57英寸)。
 SolarPlus has tested its modules with a number of clamps from different manufacturers, mounting bolt of at least M8. The length of clamp ≥40mm (1.57in).

夹具必须与组件边框保持至少7mm (0.28英寸) 但不超过10mm (0.39英寸) 的重叠部分。
 The clamp must overlap the module frame by at least 7mm (0.28in) but no more than 10mm (0.39in).

使用至少4个夹具将组件固定在安装导轨上。
 Use at minimum 4 clamps to attach modules to the mounting rails.

组件夹具不能和前侧的玻璃接触,且不得使边框变形。
 Modules clamps should not come into contact with the front glass and must not deform the frame.


请务必避免组件夹具的遮光效应。
 Be sure to avoid shadowing effects from the module clamps.

组件边框在任何情况下都不能调整。
 The module frame is not to be modified under any circumstances.

当选择这种类型的夹具安装方法时,每个组件上至少需要使用四个夹具。在组件的每个长边(纵向)上或每个短边(横向)上各安装两个夹具。视当地的风雪气象情况确定是否需要额外的夹具以确保组件能承受负载。
 When choosing this type of clamp-mounting method, use at least four clamps on each module, two clamps should be attached on each long sides of the module (for portrait orientation) or each short sides of the module (for landscape orientation). Depending on local wind and snow loads, additional clamps may be required to ensure that modules can bear the load.

施加的扭矩应按照客户所用螺栓的机械设计标准来定,例如:M8 16-20N.m (140-180lbf.in)。
 Applied torque should refer to mechanical design standard according to the bolt customer is using, ex: M8 16-20N.m(140-180lbf.in).

组件 Module	载荷 Mechanical Load Pressure	安全系数 Safety factor	安装图 Mounting Direction
66/132片单玻 66/132 pcs Backsheet-Glass	+3600 Pa /-1600Pa	1.5	
72/144片单玻 72/144 pcs Backsheet-Glass	+3600 Pa /-1600Pa	1.5	

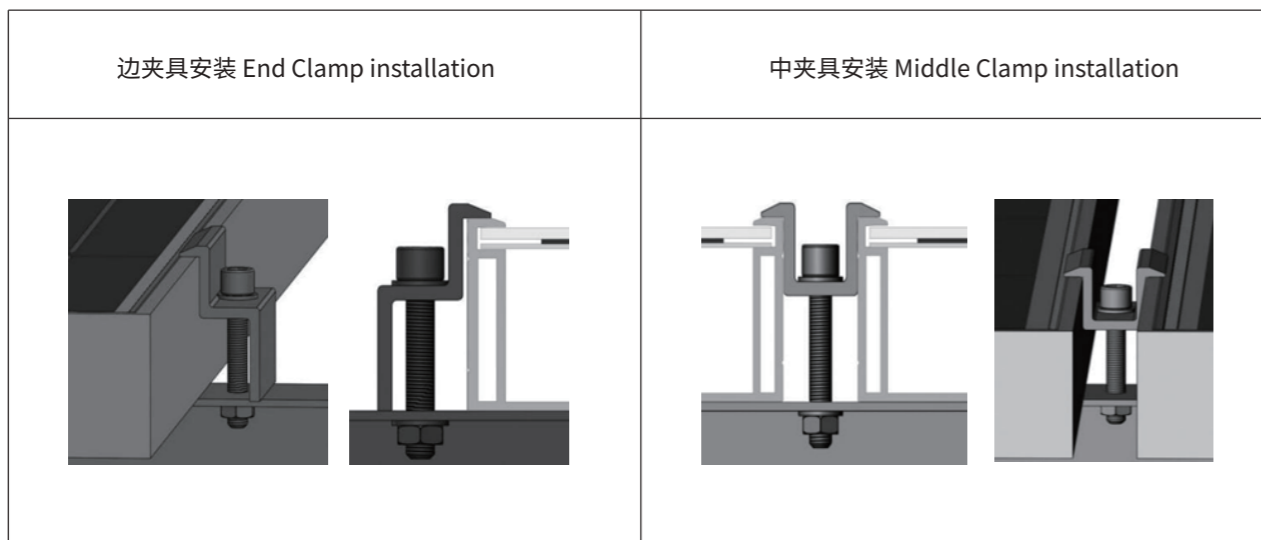

7.2.2 接地 GROUNDING

- 所有组件边框和安装架必须按照相应的《国家电气规程》正确接地。
 All module frames and mounting racks must be properly grounded in accordance with appropriate respective National Electrical Code.
- 通过使用合适的接地导体将组件边框和所有金属结构件连续连接在一起以实现正确接地。接地导体或接地线可以是铜、铜合金或任何其他符合相应的《国家电气规程》要求的用作电导体的材料。接地导体必须通过合适的接地电极连接到大地。
 Proper grounding is achieved by bonding the module frame(s) and all metallic structural members together continuously using a suitable grounding conductor. The grounding conductor or strap may be copper, copper alloy, or any other material acceptable for use as an electrical conductor per respective National Electrical Codes. The grounding conductor must then make a connection to earth using a suitable earth ground electrode.

• 旭合科技的太阳能组件可以使用第三方列出的接地装置对PV组件的金属边框进行接地安装。设备必须按照接地设备制造商的指定说明进行安装。


SolarPlus modules can be installed with the use of third party listed grounding devices for grounding the metallic frames of PV modules. The devices have to be installed in accordance with the grounding device manufacturer's specified instructions.

• 请访问<http://www.xuhe-slar.com/>查看“产品目录”链接以了解详细的接地孔位置和尺寸。

Please refer to the “Product Catalogue” link for detailed grounding hole locations and size at <http://www.xuhe-slar.com/>

• 旭合科技还建议在UL审查下使用以下方法正确接地：

SolarPlus recommends using the following methods to ground modules properly:

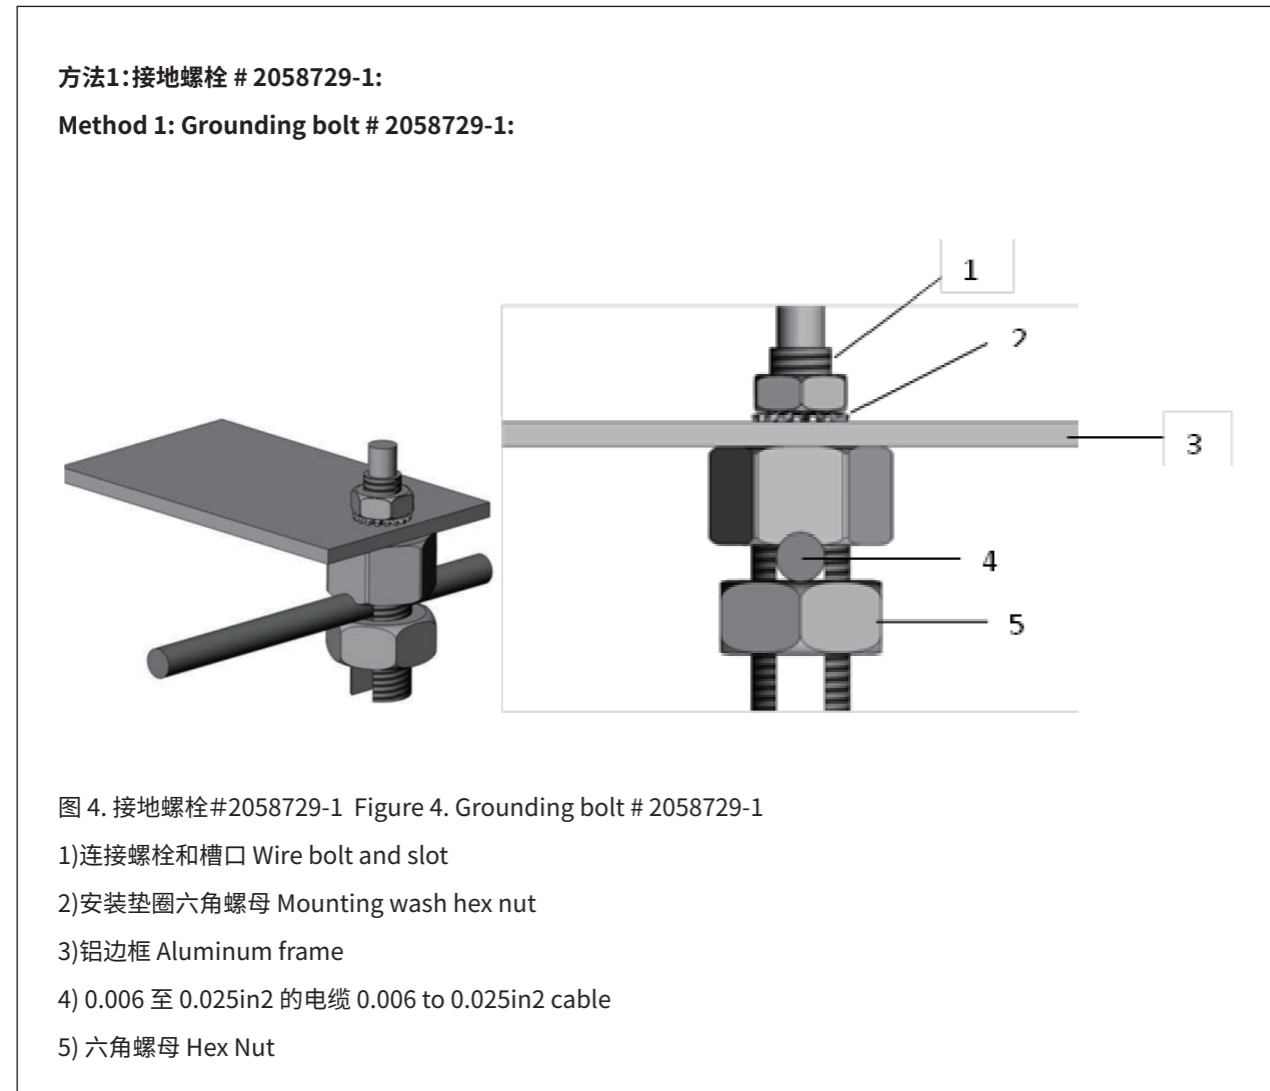

• 提供的套装附带有接地硬件, 其中包括接地螺栓、安装和接地六角螺母。

Grounding hardware comes in a package that includes the grounding bolt, mounting and grounding hex nut.

• 电接触点是通过穿透铝边框的阳极氧化涂层并拧紧安装六角螺母(与星形垫圈一起)至25lbf.in的适当扭矩形成的。


Electrical contact is made by penetrating the anodized coating of the aluminum frame, and tightening the mounting hex nut (come with the star washer) to the proper torque of 25lbf.in.

• 应选择合适尺寸的接地线(按照美国线规6至12 的实心裸铜线)并将其安装固定在连接螺栓下面。

Grounding wire size (6 to 12 AWG solid bare copper) should be selected and installed underneath the wire binding bolt.

• 连接螺栓应紧固至适当的扭矩45lbf.in。

The wire binding bolt should be tightened to the proper torque of 45lbf.in.

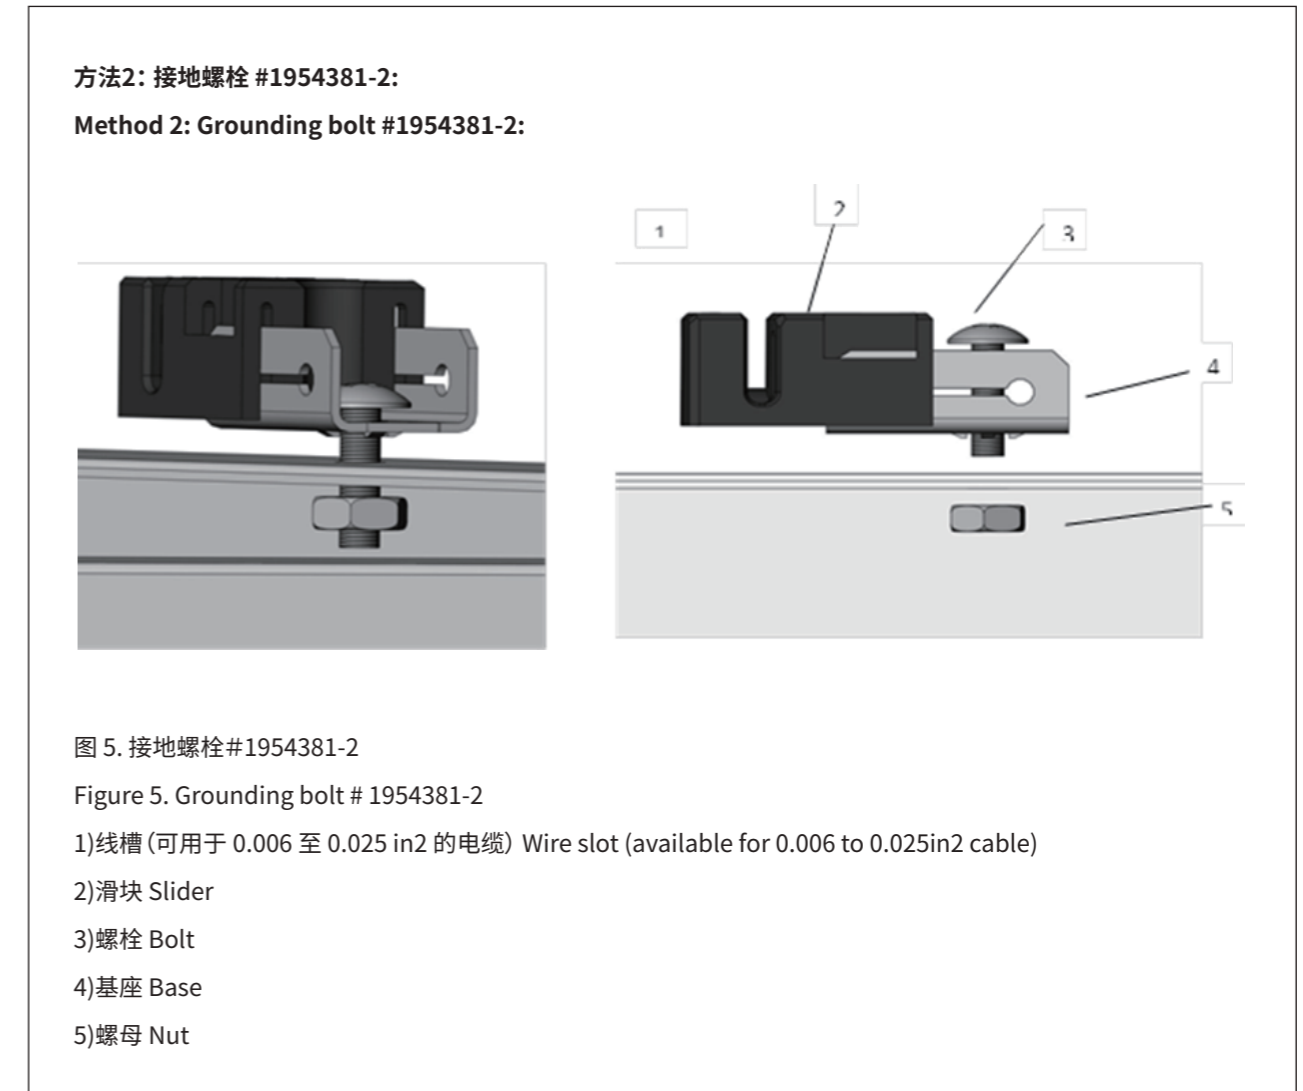

- 提供的套装附带有接地硬件, 其中包括接地螺栓、安装和接地六角螺母。

Grounding hardware comes in a package that includes the grounding bolt, mounting and grounding hex nut.

- 电接触点是通过穿透铝边框的阳极氧化涂层并拧紧安装六角螺母(与星形垫圈一起)至25lbf.in的适当扭矩形成的。

Electrical contact is made by penetrating the anodized coating of the aluminum frame, and tightening the mounting hex nut (come with the star washer) to the proper torque of 25lbf.in.

- 应选择合适尺寸的接地线(美国线规6至12的实心裸铜线)并将其安装固定在连接螺栓下面。

Grounding wire size (6 to 12 AWG solid bare copper) should be selected and installed underneath the wire binding bolt.

- 连接螺栓应紧固至适当的扭矩45lbf.in。

The wire binding bolt should be tightened to the proper torque of 45lbf.in.

- 仅列出了使用6至12 AWG实心裸铜线的泰科接地螺栓。

The Tyco grounding bolt is only listed for use with 6 to 12 AWG bare solid copper wire.

- 接线片应安装在大于接线片底面的表面上。

The lug should be installed on a surface that is larger than the bottom surface of the lug.

- 接线片应安装在PV组件上提供的接地孔中。

The lug should be installed in the grounding holes provided on the PV module.

- 机械螺栓A应扭到35lbf.in扭矩, 以将接地螺栓固定到组件边框上。

Machine bolt A should be torqued to 35lbf.in, to secure the grounding bolt to module frame.

- 仅列出了使用6至12 AWG实心裸铜线的接地螺栓。

The grounding bolt is only listed for use with 6-12 AWG bare solid copper wire.

- 为了正确的绑线, 机械螺栓B应扭到35lbf.in扭矩。

For proper wire binding, machine bolt B should be torqued to 35lbf.in.

7.2.3 电气安装 ELECTRICAL INSTALLATION

所有接线应由合格的安装人员按照当地法规和程序进行。

All wiring should be performed, by qualified installers, in accordance with the local codes and regulations.

组件可以串联, 通过将一个组件的正极插头插入下一个组件的负极插座来提高工作电压。在连接组件之前, 始终确保触点无腐蚀、清洁并且干燥。

Modules can be connected in series to increase the operating voltage by plugging the positive plug of one module into the negative socket of the next. Before connecting modules always ensure that the contacts are corrosion free, clean and dry.

如果一组阵列以相反极性连接到另一个, 则会对产品造成无法修复的损坏。在进行并联之前, 请务必确认各列的电压和极性。如果测量发现各列之间的极性相反或电压差值大于10V, 则在进行连接之前检查其结构配置。

Product can be irreparably damaged if an array string is connected in reverse polarity to another. Always verify the voltage and polarity of each individual string before making a parallel connection. If you measure a reversed polarity or a difference of more than 10V between strings then check the string configuration before making the connection.

旭合科技的太阳能组件采用截面积为4mm² (0.006in²) 且防紫外线的绞合铜电缆。用于连接直流系统的所有其他电缆应具有相似(或更高)规格。旭合科技建议所有电缆应布设在适当的管道中且远离易积水的地方。

SolarPlus modules are provided with stranded copper cables with a cross sectional area of 4mm²(0.006in²) which are UV resistant. All other cables used to connect the DC system should have a similar (or better) specification. SolarPlus recommends that all cables are run in appropriate conduits and sited away from areas prone to water collection.

系统的最高电压必须低于最高认证电压以及安装中系统中的变频器及其他电气设备的最高输入电压。为了确保这种情况, 阵列的开路电压需要在该位置的最低预期环境温度下计算。可以使用以下公式进行计算:

The maximum voltage of the system must be less than the maximum certified voltage and the maximum input

方法 3: 接地螺栓 # EL6CS14-6

Method 3: Grounding bolt # EL6CS14-6

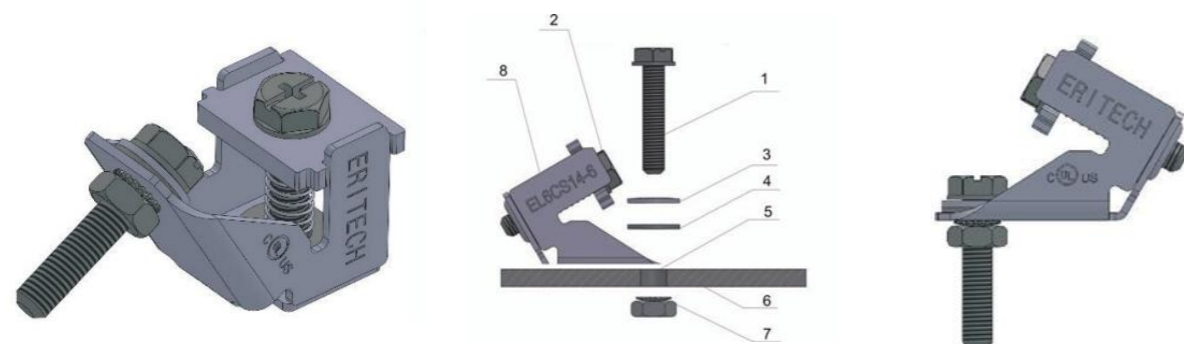


图 6. 接地螺栓#EL6CS14-6

Figure 6. Grounding bolt # EL6CS14-6

- | | | |
|-------------------------|---|--------------------------|
| 1) 机械螺栓A Machine Bolt A | 2) 机械螺栓B Machine Bolt B | 3) 贝氏垫圈Belleville washer |
| 4) 平垫圈 Flat Washer | 5) #10 [M5]机械螺栓的间隙孔 Clearance hole for #10[M5] machine bolt | |
| 6) 铝边框 Aluminum frame | 7) 带锁紧垫圈的机框六角螺母 Machine box hex nut with lock washer | |
| 8) 接地螺栓 Grounding bolt | | |

voltage of the inverter and of the other electrical devices installed in the system. To ensure that this is the case, the open circuit voltage of the array string needs to be calculated at the lowest expected ambient temperature for the location. This can be done using the following formula.

$$\text{最大系统电压} \geq N * \text{Voc} * [1 + \text{TCvoc} \times (\text{Tmin}-25)]$$

$$\text{Max System voltage} \geq N * \text{Voc} * [1 + \text{TCvoc} \times (\text{Tmin}-25)]$$

其中

Where

- N 表示无串联组件
Number of modules in series
- Voc 表示各组件的开路电压(参考产品标签或数据表)
Open circuit voltage of each module (refer to product label or data sheet)
- TCvoc 表示组件开路电压的温度系数(参见数据表)
Thermal coefficient of open circuit voltage for the module (refer to data sheet)
- Tmin 表示最低环境温度
The lowest expected ambient temperature

每个组件都有两条标准的90°C遮光输出电缆且在每个端子上接有即插即用的连接器。输出电缆为PV导线电缆的尺寸为12AWG。该电缆适用于接线直接暴露在阳光下的情况。我司要求所有接线和电气连接符合相应的《国家电气规程》要求。

Each module has two standards 90°C sunlight resistant output cables each terminated with plug & play connectors. The PV Wire cables are 12AWG in size. This cable is suitable for applications where wiring is exposed to the direct sunlight. We require that all wiring and electrical connections comply with the appropriate National Electrical Code.

电缆的外径范围为5到7mm (0.038~0.076 in2)。

The minimum and maximum outer diameters of the cable are 5 to 7mm (0.038 to 0.076in2).

现场接线应使用最低90°C耐温、耐光且横截面不低于为4mm2的铜线作为PV连接线。

For field connections, use at least 4mm2 copper wires insulated for a minimum of 90°C and sunlight resistance with insulation designated as PV Wire.

电缆的最小弯曲半径应为43mm (1.69英寸)。

The minimum bending radius cables should be 43mm (1.69in).

7.2.3.1 WIRING 接线

为了确保系统正常运行, 在连接组件或连接负载(如变频器、电池等)时, 应观察确保电缆的极性连接正确(图1和图2所示)。

如果组件连接不正确, 旁路二极管可能会损坏。PV组件可以串联接线以增加电压。串联连接是将接线从一个组件的正极端子连接到下一个组件的负极端子上。图1显示了组件的串联连接方式。PV组件可以并联连接以增加电流(图2所示)。并联连接是将接线从一个组件的正极端子连接到下一个组件的正极端子上。


To ensure proper system operation the correct cable connection polarity (Figures 1 & 2) should be observed when connecting the modules to each other or to a load, such as inverter, a battery etc. If modules were not connected correctly, the bypass diode could be destroyed. PV modules can be wired in series to increase voltage. A series connection is made when the wire from the positive terminal of one module is connected to the negative terminal of the next module. Figure 1 shows modules connected in series. PV modules can be connected in parallel to increase current (Figure 2). A parallel connection is made when the wire from the positive terminal of one module is connected to the positive terminal on the next module.

组件串联并联数量, 需根据系统配置合理设计。

The number of modules in series and in parallel shall be designed reasonably according to the system configuration.

必须遵守上述所有说明以满足旭合科技保修条件。

All instructions above have to be obeyed to maintain SolarPlus' s limited warranty.

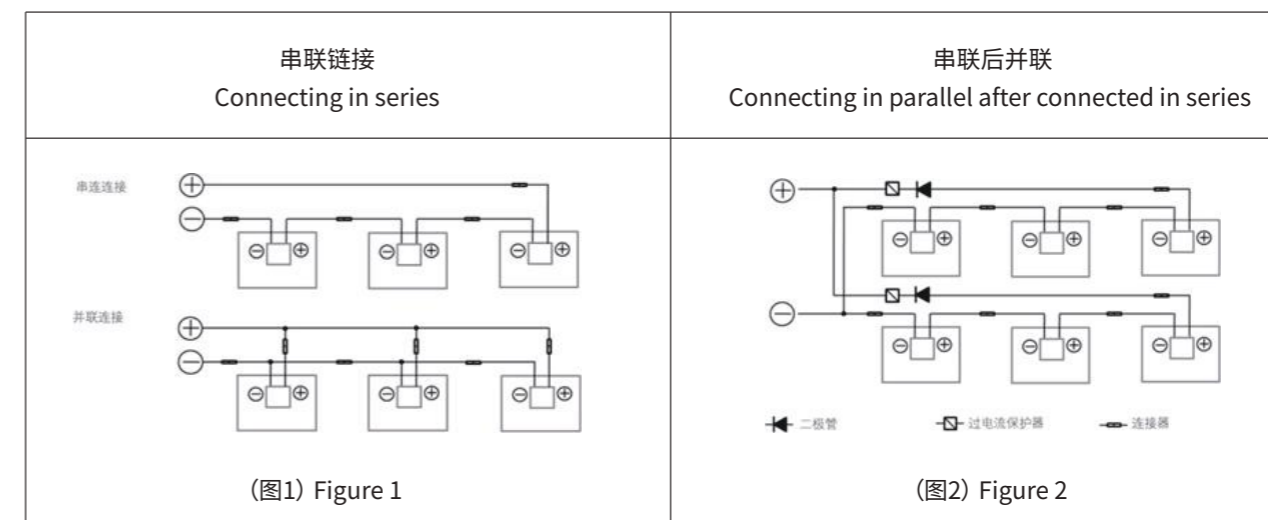

7.2.3.2 FUSING 熔丝

在安装熔丝时应将其额定为最大直流电压并连接到阵列的每个非接地极上(换言之, 如果系统没有接地则应将熔丝连接到正负极上)。

When fuses are fitted they should be rated for the maximum DC voltage and connected in each, non- grounded pole of the array (i.e. if the system is not grounded then fuses should be connected in both the positive and negative poles).

与阵列串联连接的熔丝的最大额定值通常为20A, 但实际的组件特定额定值可在产品标签和产品数据表中获得。

The maximum rating of a fuse connected in series with an array string is typically 20A but the actual module specific rating can be found on the product label and in the product datasheet.

该熔丝的额定值也对应于组件可承受的最大反向电流值(当一个阵列被遮蔽时,该阵列会加载到其他并联的组件阵列生成电流),因此会对并列连接阵列的数量产生影响。

This fuse rating value also corresponds to the maximum reverse current that a module can withstand (when one string is shaded then the other parallel strings of modules will be loaded by the shaded string and current will flow) and therefore impacts the number of strings in parallel.

禁止两串或多串并联后再接熔丝。

Do NOT share a fuse in a Combiner Box with two or more strings in parallel connection.

8. 逆变器的选择及其兼容性 INVERTER SELECTION AND COMPATIBILITY

当安装在符合IEC规定的系统中时,旭合科技的组件通常不需要接地,因此可以与电隔离式的逆变器(带变压器)或无变压器式的逆变器一起工作。

When installed in systems governed by IEC regulations, Solar N Plus modules normally do not need to be electronically connected to earth and therefore can be operated together with either galvanically isolated (with transformer) and transformerless inverters.

在炎热和潮湿的地区(如海岸、湿地)选择带有隔离变压器的逆变器以确保组件在正电压下的正常工作。

Choose inverters with isolation transformers in hot and wet areas (such as shores, wetlands), to ensure proper module function under positive voltage.

9. 组件的维护 MODULE MAINTENANCE FOR PV MODULE PV

9.1 组件外观检查和替换 PANEL VISUAL INSPECTION AND REPLACEMENT

应定期检查光伏阵列中组件是否有坏,例如玻璃破裂、线缆破损、接线盒损坏等因素导致组件发生功能性和安全性故障,须更换相同型号组件。

The modules in a PV array should be regularly checked for damage. Factors such as glass breakage, cable breakage, and junction box damage may lead to function and safety problems. In the case of a damaged module, replace it with the same type of module. Refer to the appropriate Product Installation Manual for installation and dis-assembly of module.

建议每6个月执行一次预防性检查,不要擅自更换组件的元部件。如果需要进行电性能或机械性能的检查或维护,建议让具有资质的专业人员进行操作,以免发生触电或人员伤亡。

It is recommended to perform a preventive inspection every six months without changing the components of the module. If electrical or mechanical appliances are used for inspection or maintenance, they should be operated by qualified professionals to avoid any electric shock or loss of life.

除去一切可能遮蔽太阳能阵列从而影响其性能的植被。

Trim any vegetation which may shade the solar array, thus impacting performance.

检查安装的硬件是否紧固到位。

Check that mounting hardware is properly tightened.

检查每个非接地极中的所有阵列熔丝是否正常工作。

Check that all string fuses in each non/earthed pole are operating.

组件必须用相同类型的更换。不许触碰电缆和连接器的带电部位。搬运组件时应使用适当的安全防护装置(绝缘工具、绝缘手套等)。

Replacement modules must be of same type. Do NOT touch live parts of cables and connectors. Use appropriate safety equipment (insulated tools, insulating gloves, etc.) when handling modules.

修复时用不透明材料覆于组件的前侧表面上。暴露在阳光下的组件会产生高电压,极其危险。

Cover the front surface of modules by an opaque material when repairing. Modules when exposed to sunlight generate high voltage and are dangerous.

旭合科技的光伏组件接线盒中配有旁路二极管,会使组件加热和电流的损耗最小化。

Solar N Plus PV modules are equipped with bypass diodes in the junction box. This minimizes module heating and current losses.

- 不许尝试打开接线盒更换二极管,即使它们发生故障。

Do NOT open the junction box to change the diodes even if they malfunction.

- 在使用电池的系统,阻塞二极管通常放置在电池和PV组件输出装置之间以防止夜间电池放电。

In a system using a battery, blocking diodes are typically placed between the battery and the PV module output to prevent battery discharge at night.

- 如果组件损坏(玻璃破碎或背板上有划痕),则需要对其进行更换。

In the event that a module is damaged (broken glass or a scratch on back sheet) and needs to be replaced.

- 请注意本手册前面列出的安全注意事项。

Observe the safety precautions listed earlier in this Manual.

- 进行特殊安装时需要穿戴防切割手套和其他个人防护装备。

Wear cut resistant gloves and other personal protective equipment required for the particular installation.

- 在尝试移除组件之前,一定要将受影响的阵列隔离以防止电流产生。

Isolate the impacted array string to prevent current flow before attempting to remove the module.

- 用供应商提供的相关断开工具去断开受影响组件的连接器。

Disconnect the connectors of the affected module using the related disconnect tool provided by suppliers.

- 使用相同类型的新组件更换损坏的组件。

Replace the damaged module with a new functional module of the same type.

- 检查阵列的开路电压并验证与其并联连接的其他阵列的开路电压是否在10V以内。

Check the open circuit voltage of the array string and verify that this is within 10V of the other strings to be connected in parallel.

- 重新合上断路器。

Turn the breaker back on.

9.2 连接器和线缆检查 CONNECTOR AND CABLE INSPECTION

检查所有电缆以验证其连接是否牢固;避免电缆受阳光直射且使其远离积水区域。

Inspect all cables to verify that connections are tight; the cables are protected from direct sunlight and sited away from areas of water collection.

建议至少每年检查一次端子螺栓的扭矩和接线的各方面情况。此外,检查安装的硬件是否紧固到位。连接松动会导致阵列损坏。

It is recommended to check the torque of terminal bolts and the general condition of wiring at least once a year. Also, check that mounting hardware is properly torqued. Loose connections will result in damage to the array.

9.3 清洗 CLEANING

太阳能组件产生的电量与落在其上的光照成比例。电池被遮挡的组件产生的能量相对较少,因此保持组件的清洁十分重要。

The amount of electricity generated by a solar module is proportional to the amount of light falling on it. A module with shaded cells will produce less energy and therefore it is important to keep all PV modules clean.

应在辐照度低于200W/m²的情况下清洁光伏组件,不宜使用与组件温差较大的液体清洗组件。

Clean PV modules when the irradiance is below 200W/m²; liquid with a large temperature difference from the modules must not be used for cleaning the modules.

严禁在风力大于4级、大雨或大雪的气象条件下清洗光伏组件。

It is forbidden to clean PV modules under the weather conditions of wind more than 4 grades, heavy rain or heavy snow.

压力水流清洗时,组件玻璃表面的水压不得超过700千帕(14619.80磅/英尺²),组件严禁承受额外的外力。

When cleaning with pressurized water, the water pressure on the glass surface of the module must not exceed 700 KPa (14619.80psf); the module must Not bear the extra force.

光伏组件清洁工作中,严禁踩踏组件、严禁流水溅射至组件背面和电缆,要保证连接头的清洁和干燥,防止电击和火灾危险;严禁使用蒸汽清洁器。

When cleaning PV modules, do NOT step on the modules; do NOT spray water on the backside of the module or the cables; keep the connectors clean and dry; prevent fire and electrical shock from occurring; do NOT use as steam cleaner.

组件的后表面通常不需要清洁;但在认为确实有必要对其进行清洗时,应避免使用可能引起损坏或穿透基底材料的一切尖锐物体。

The back surface of the module normally does not need to be cleaned but, in the event this is deemed necessary, avoid the use of any sharp projects that might damage the penetrating the substrate material.

应定期削减植被,避免植被遮挡光伏组件。

Periodically trim any vegetation which may shade the solar array thus impacting performance.

清洁组件时,应使用软布和温和的清洁剂以及清水。注意避免出现严重的可能损坏组件的热冲击。清洁组件时应保证水与组件之间的温差不大。

When cleaning the modules, use a soft cloth together with a mild detergent and clean water. Take care to avoid severe thermal shocks which might damage the module by cleaning modules with water which has a similar temperature to the modules being cleaned.

应使用干燥或潮湿的柔软洁净的布料擦拭光伏组件,严禁使用腐蚀性溶剂或用硬物擦拭光伏组件。

Use dry or wet soft clean cloth to clean the PV modules; non-corrosive solvents or hard objects are strictly prohibited.

光伏组件表面有油污等难清洁物质,可使用常规家用玻璃清洗剂;注意不能使用碱性及强酸性溶剂。

If there is greasy dirt and other substances on the surface of the PV module which are difficult to clean, conventional household glass cleaning agents can be used; Do NOT use the alkaline and strong acid solvents.

清洁组件的背面时,注意避免清洗液渗到材料底层。应稍微频繁地清洁水平安装的组件(0°倾斜角),因为这些组件不会像以10°倾斜角或更大倾斜角安装的组件那样具有“自清洁”功能。

When cleaning the back surface of the module, take care to avoid penetrating the substrate material. Modules that are mounted flat (0° tilt angle) should be cleaned more often, as they will NOT "self-clean" as effectively as modules mounted at a 10° tilt or greater.

如果不确定是否需要清除阵列或截面,则首先选择一系列特别脏的阵列开始。

If you are unsure whether the array or section there of needs to be cleaned, first select an array string that is particularly soiled.

测量并记录来自变频器对该列电流的反馈。

Measure & record the inverter feed in current from that string.

- 清洗该列的所有组件。

Clean all modules in the string.

- 重新测量变频器的反馈电流并计算清洁后的改进百分比。

Measure the inverter feed in current again and calculate the % improvement from cleaning.

9.3.1 水质要求 REQUIREMENTS FOR WATER QUALITY

- PH: 5 ~7

- 氯化物或盐分含量 Chloride and Salinity :0 - 3,000 mg/L

- 浑浊度 Turbidity:0-30 NTU

- 电导率 Conductivity:1500~3000 μs/cm

- 总溶解固体 Total dissolved solids (TDS): ≤1000 mg/L

- 水硬度 Water Hardness—calcium and magnesium ions:0-40 mg/L

- Non-alkaline water must be used; demineralized water shall be used if the condition permits.

必须采用非碱性水,具备条件时应使用软化水。

9.3.2 MODULE INSPECTION AFTER CLEANING 清洗后组件检查

- 目视组件整体外观清洁、明亮,无污渍。

Ensure that the module under visual inspection is clean, bright and free of stains.

- 抽样检查组件表面是否有积灰存在。

Spot check to verify whether there is soot deposit on the module surface.

- 组件表面无明显的刮伤痕迹。

Check to see there are no visible scratches on the surface of the module.

- 组件表面无人为造成的破裂现象。

Check to see there are no man-made cracks are on the module surface.

- 清洗后组件支架有无倾斜、弯曲现象。

Check to see whether the module support structure is leaning or bent after cleaning.

- 组件接线端子是否有脱落的现象等。

Check to see whether the wiring terminals of the module are detached.

- 光伏组件清洗完后,完成光伏组件清洗文字记录。

After cleaning PV modules, fill out the PV module cleaning record.

9.3.3 TROUBLESHOOTING 故障排查

- 如果安装后无法正常工作,请立即通知安装商。建议每6个月执行一次预防性检查,不要擅自更换组件的元部件。如果需要进行电性能或机械性能的检查或维护,建议让具有资质的专业人员进行操作,以免发生触电或人员伤亡。

If your installation does not work properly, please inform your installer immediately. It is recommended to perform a preventive inspection every six months without changing the components of the modules. If electrical or mechanical appliances are used for inspection or maintenance, they should be operated by qualified professionals to avoid any electric shock or loss of life.

10. REPORTING TECHNICAL ISSUES or CLAIMS 技术问题或索赔

- 请联系安装商。

Contact your installer.

- 请登录<http://www.solarnplus.com> 联系旭合科技的售后服务团队。

Contact Solar N Plus after sales service team at <http://www.solarnplus.com/>.

- 请通过<http://www.solarnplus.com/>提交《客户反馈信息表》。我司的技术服务代表会在5个工作日内与您联系。

Submit the Customer Feedback form at: <http://www.solarnplus.com/> and one of our technical service representatives will contact you within 5 business days.

- 请在<http://www.solarnplus.com/>上下载关于组件的规格或数据表。

For module specifications or datasheets, please download from: <http://www.solarnplus.com/>